

Quickstart Guide

DMC1 - Team

June 11, 2007

1 Introduction

Pipeline Manager is an application for the management of pipeline data. The software provides all the functionality for viewing features and obtaining information relating to the features from a variety of databases. All of this can be accomplished within a geographical context and many additional geographical functions are included. The system is designed to be easy to use, requiring no specialist knowledge of computing or geographical systems.

Contents of the Package

- 20 day trial version of Pipeline Manager Professional 6.2
- 20 day evaluation version of MapInfo Professional v8.0 (Pipeline Manager needs MapInfo Professional Version 6.0 or higher to run.)
- Demo data for Pipeline Manager Professional

2 Install Pipeline Manager Professional

You need administrator rights for the installation process:

1. Put the Pipeline Manager Trial CD in your CD/DVD-ROM drive. A CD menu will show automatically¹.
2. Click "Install Pipeline Manager Professional 6.2 Trial".
3. Customize your installation:

¹If the Autostart function is disabled, start the CDMenu.exe manually.

- a) To skip the installation of MapInfo Professional v8.0, uncheck the entry in setup.
- b) To skip the installation of Borland Database Engine (BDE)², uncheck the entry in setup.

4. Finish the installation.

MapInfo Professional and Pipeline Manager Professional can be removed under: Start > Settings > Control Panel > Add/Remove Programs.

3 Starting Pipeline Manager Professional

After installation, the following steps are necessary to start and use Pipeline Manager Professional:

- To start the software, use the following link in the Windows Start Menu: Start > Programs > PM Professional 6.2 Trial > Pipeline Manager 6.2 Trial.
- Pipeline Manager provides an access control mechanism to protect valuable data. It is based on a login name and a password. A login is required every time when you start the program. The following table contains the logins that are preconfigured for this trial:

LOGIN (USER ID)	PASSWORD	ACCESS
demo	demo	read only access to overlays; limited access to tools
admin	admin	full access to all overlays and tools

4 More Information

To gain a deeper insight of Pipeline Manager Professional 6.2, please read the following documents:

- *ProjectDescription.pdf* - Description of the content and meaning of the demo data,
- *QuickReference.pdf* - Overview of the main functionalities of Pipeline Manager,
- *Pipeline Manager Help* - Detailed help in Pipeline Manager.

²Please skip installation only if you are sure the BDE v5.0 or higher is installed on your system.